


Recording Jack Installation Instructions

1. Remove the modular handset* cord from the base of the phone.
2. Insert the modular coil cord of the Recording Jack into the modular handset port on the base of the telephone.
3. Plug the modular handset cord into the modular port on the Recording Jack.
4. Plug one end of the interface cord into the 3.5mm port on the Recording Jack.
5. Plug the other end of the interface cord into the Mic input jack** of the tape recorder.

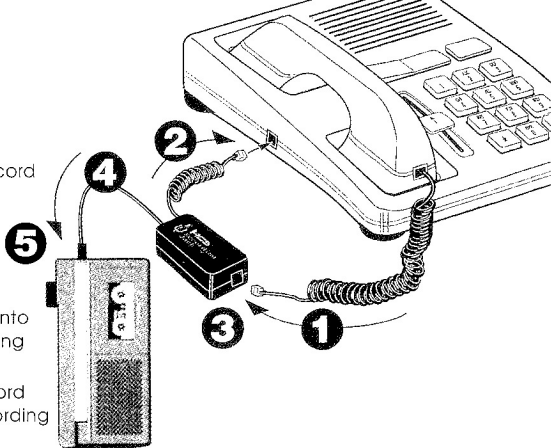

To listen to the recording through the handset or headset, unplug the interface cord from the microphone input and plug it into the jack marked "ear."

*If a headset is used, follow the same instructions substituting the headset for the handset. **If a different size plug is needed on the recorder side of the interface cord, consult your local electronics store.